

Office Lum/LED办公灯具

SM100C

Mounting instruction/ 安装说明


SM100C-M010a



| Type Desc 型号描述 | Power(W) 灯具功率 | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) | CCT 色温 | kg |
|---------------------------|------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----|
| SM100C LED25S PSU W60L60 | 27 | 597 | 597 | 36 | 380 | 380 | 3000K | 4.4 |
| SM100C LED25S PSU W20L120 | 27 | 1197 | 197 | 36 | 900 | 150 | 4000K | 3.7 |
| SM100C LED35S PSU W60L60 | 37 | 597 | 597 | 36 | 380 | 380 | 4000K | 4.4 |
| SM100C LED35S PSU W20L120 | 37 | 1197 | 197 | 36 | 900 | 150 | 6500K | 3.7 |

Suspension Kit Accessory SM100Z SMS for suspension mounting. Kit to be purchased separately.


Appearance/外观

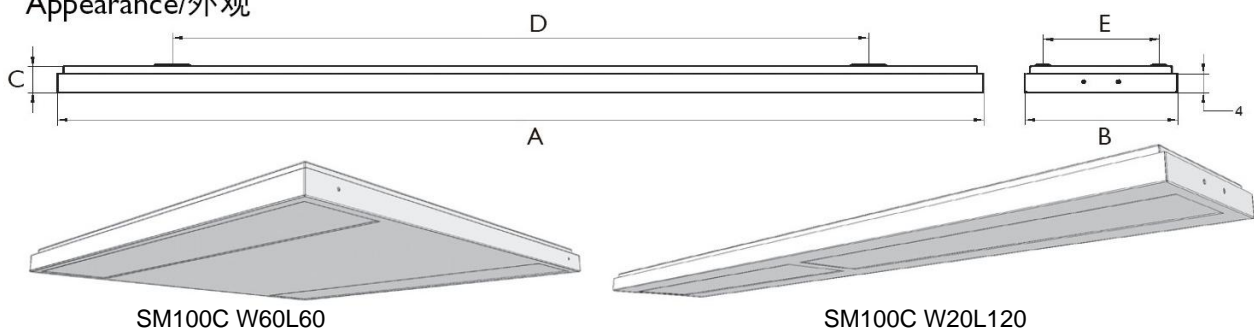


SM100C W60L60

SM100C W20L120

Surface Mounted/吸顶安装

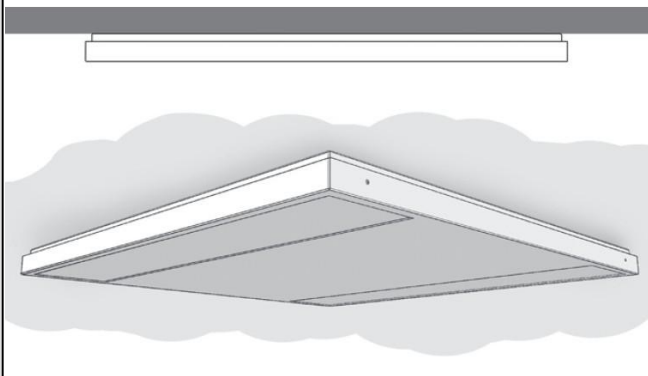

Suspension/悬吊安装

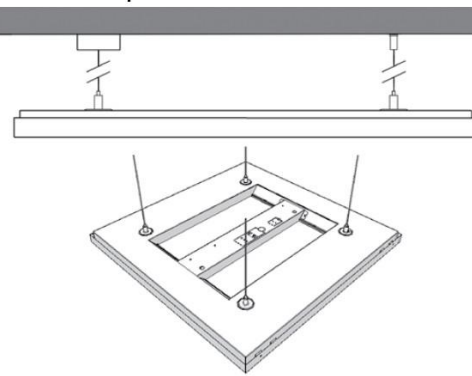

- 1、The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements
灯具应由有资格的电工安装，接线要符合IEE 电气标准或国家标准。
- 2、Do not switch on before complete installation.
接线过程中，切勿通电。
- 3、The luminaire is suitable for direct mounting on normally flammable material.
灯具适合于直接安装在普通可燃材料表面。
- 4、For indoor use only.
仅限于室内使用。




Only to be installed outside arms reach.
This product is not for household use.

For non-user replaceable light sources:

"The Light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person"

Suspension / 悬吊安装

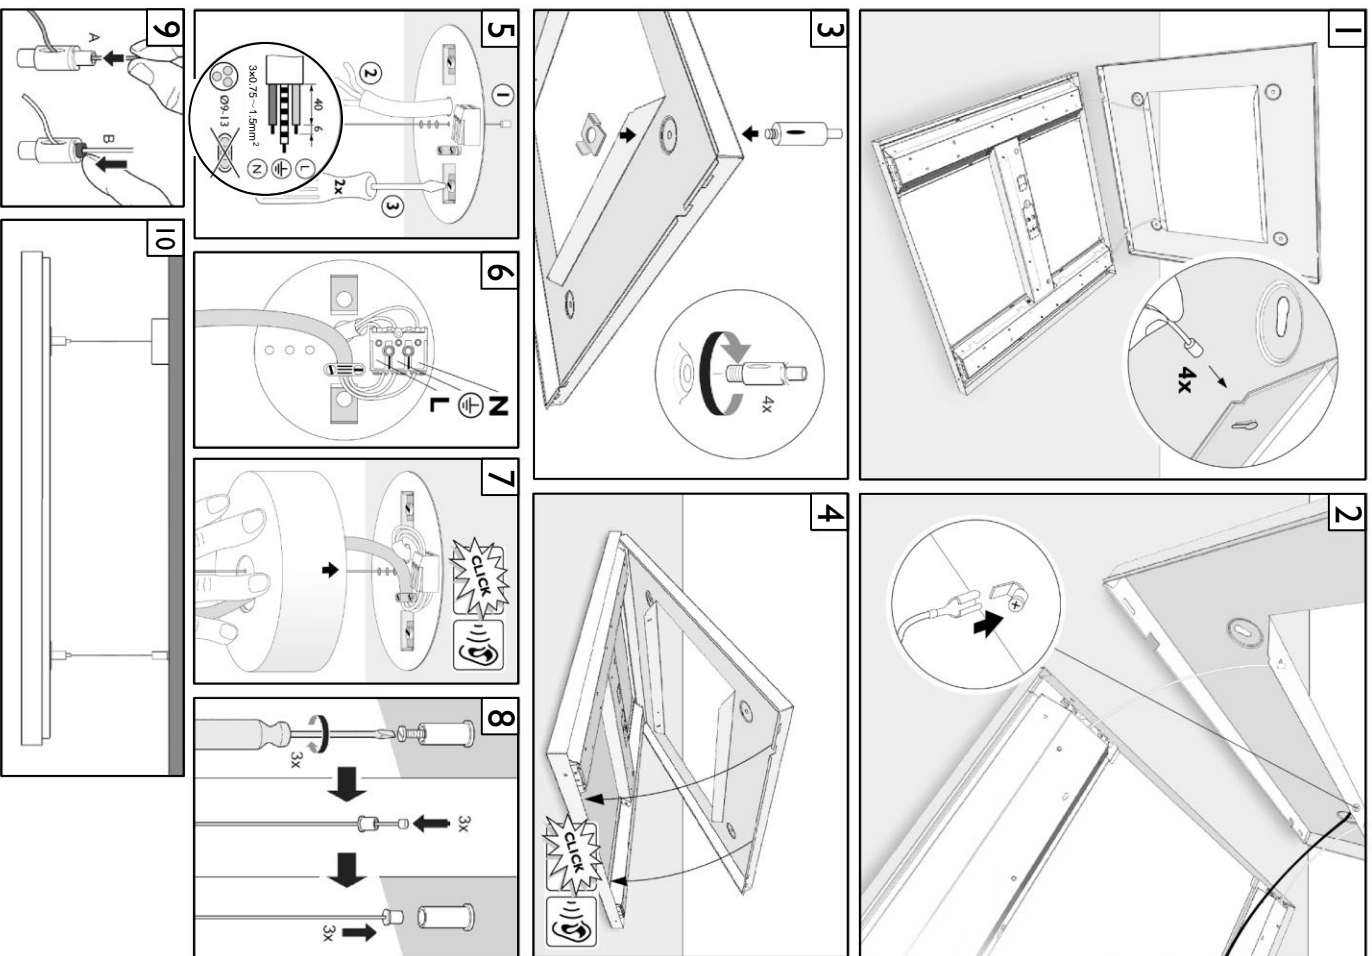

Surface Mounted / 吸顶安装

