



# TUV Dynapower system- Extreme reliability

## TUV Dynapower system

Philips Dynapower system consists of an electronic DynaPower driver that operates one or two TUV Amalgam 230W, 260W and 335W XPT lamps. This system is extremely reliable and robust. The driver allows for immediate energy savings compared to similar drivers on the market. Moreover, it can be dimmed down to 60% power level for additional energy savings. Further energy savings are realized by the TUV Amalgam XPT lamps, because they can be dimmed down to reach the same UV output as similar lamps on the market.

### Benefits

- Extreme reliability of driver; with annual failure rate of less than 1%
- Easier to maintain compliance with regulations thanks to reduced risk of failures
- Easier maintenance thanks to single lamp operation, allowing to detect easily which lamps need to be replaced
- Dimmable up to 60% power level for additional energy savings
- Best environmental choice thanks to maximum lifetime reliability, in combination with minimum substances, packaging and product weight

### Features

- Operates 230W, 260W and 335W TUV Amalgam XPT lamps
- Single lamp operation possible
- Cooler operating temperature for additional energy savings
- 100% stress testing minimizing 0-hour failures
- Protection against voltage peaks
- Permanent overvoltage protection
- Approximately 20 seconds start-up time (compared with 90 seconds for similar drivers on the market)

# TUV Dynapower system

## Application

- Deactivation of bacteria, viruses and other micro-organisms
- Municipal drinking water treatment equipment
- Municipal waste water treatment equipment
- Process water treatment equipment

## Warnings and Safety

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.
- DANGER: Risk Group 3 Ultra Violet product. These lamps emit high-power UV radiation that can cause severe injury to skin and eyes. Avoid eye and skin exposure to unshielded product. Use only in an enclosed environment which shields users from the radiation.

## Versions




## Dimensional drawing



Product	D	O	C (max)
TUV 230W XPT 20PK	25 mm	1400 mm	1514 mm

## Dimensional drawing

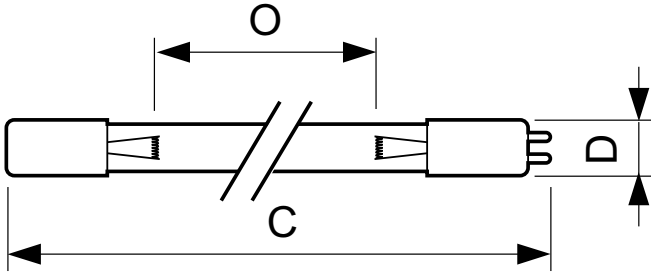

Product	D	O	C (max)
TUV 260W XPT HO DIM UNP/20	32 mm	1400 mm	1516 mm
TUV 335W WP XPT SE HO UNP/20	32 mm	1400 mm	1516 mm
TUV 260W XPT DIM UNP/20	32 mm	1400 mm	1514 mm
TUV 335W XPT SE HO UNP/20	32 mm	1400 mm	1516 mm

### Controls and Dimming

Dimmable	Yes
----------	-----

### General Information

Main Application	Disinfection
------------------	--------------

## Operating and Electrical

Order Code	Full Product Name	Lamp Current (Nom)	Power (Nom)
928102805112	TUV 260W XPT DIM UNP/20	3.055 A	260 W
928104405112	TUV 260W XPT HO DIM UNP/20	2.7 A	260 W
928104505112	TUV 335W WP XPT SE HO UNP/20	3.34 A	335 W

Order Code	Full Product Name	Lamp Current (Nom)	Power (Nom)
928104605112	TUV 335W XPT SE HO UNP/20	3.34 A	335 W
928104005112	TUV 230W XPT 20PK	3.06 A	230 W

## General Information

Order Code	Full Product Name	Cap-Base	Operating Position
928102805112	TUV 260W XPT DIM UNP/20	G5.4X17Q	P10
928104405112	TUV 260W XPT HO DIM UNP/20	G5.4X17Q	UNIVERSAL
928104505112	TUV 335W WP XPT SE HO UNP/20	G17X10	UNIVERSAL

Order Code	Full Product Name	Cap-Base	Operating Position
928104605112	TUV 335W XPT SE HO UNP/20	G5.4X17Q	UNIVERSAL
928104005112	TUV 230W XPT 20PK	G5.4X17Q	H45

## Light Technical

Order Code	Full Product Name	Lumen Depreciation At Useful Lifetime
928102805112	TUV 260W XPT DIM UNP/20	-

Order Code	Full Product Name	Lumen Depreciation At Useful Lifetime
928104405112	TUV 260W XPT HO DIM UNP/20	10 %

