



# OptiVision MVP507

## MVP507 MHN-LA2000W/842 400V MB SI SL

OPTIVISION - MASTER MHN-LA - 2000 W - Medium beam - Sealing

Optivision is an asymmetric downlighting luminaire that combines compact dimensions with very high efficiency. Available with narrow, medium and wide beams for flexibility in application, it provides excellent control of spill light and limitation of glare and upward leakage of light. Optivision can accommodate metal-halide lamps for good colour rendering or high-pressure sodium lamps for economical operation. Excellent spill-light control, limitation of glare and upward leakage of light is secured by asymmetric optics that achieve peak intensity at 60° and a sharp cut-off of light at 80°. The MHN-LA/FC lamps guarantee pleasant and natural colour rendering and comfortable atmosphere.

### Product data

General Information			
Number of light sources	1 [ 1 pc]		units, surge-protection device, optics, front cover and mechanical parts
Lamp family code	MHN-LA [ MASTER MHN-LA]	Product family code	MVP507 [ OPTIVISION]
Lamp power	2000 W	Operating and Electrical	
Lamp colour code	842 neutral white	Lamp supply voltage	400 V [ 400]
Kombipack	Lamp(s) included	Input Voltage	400 V
Protection class IEC	Safety class I (I)	Ignitor	SI [ Series]
CE mark	CE mark	Mechanical and Housing	
ENEC mark	-	Colour	Aluminium
Ball impact resistance mark	Ball Impact Resistance mark	Dimensions (height x width x depth)	NaN x NaN x NaN mm (NaN x NaN x NaN in)
Mechanical accessories	SL [ Sealing]		
Optic type outdoor	Medium beam		
Serviceability class	Class A, the luminaire is equipped with serviceable parts (when applicable): LED board, driver, control		

# OptiVision MVP507

## Approval and Application

Ingress protection code	IP65 [ Dust penetration-protected, jet-proof]
Mech. impact protection code	IK08 [ 5 J vandal-protected]

## Product Data

Full product code	872790029578800
Order product name	MVP507 MHN-LA2000W/842 400V MB SI SL
EAN/UPC – product	8727900295788


Order code 910403787512

SAP numerator – quantity per pack 1


Numerator – packs per outer box 1

SAP material 910403787512

SAP net weight (piece) 17.200 kg



## Dimensional drawing

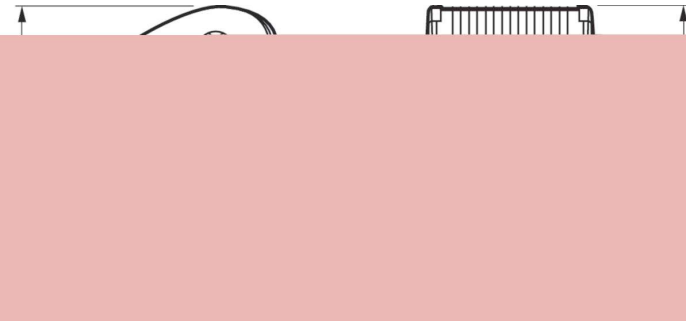

OptiVision MVP507

