



MSR Gold™ FastFit

MSR Gold™ 1200 FastFit 1CT/4

All lamps burn out eventually, but when this happens with single ended MSR Gold™ FastFit, it is replaced in seconds – thanks to the specially designed lamp base and lamp holder. This lamp provides a high beam intensity of pure, white light for a truly illuminating performance, while the gold-plated caps provide superior heat protection and prevent premature failure. P3 technology allows use in any position and at higher temperatures, further extending lamp life and consistency of high-quality light output. Also, because the FastFit design is applied to Philips Halogen lamps, switching between lamp technologies can be done quickly and easily. The Philips MSR Gold™ 1200 FastFit can be operated in a lamp wattage range between 800W and 1400W.

Warnings and Safety

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

Product data

General Information		Operating and Electrical	
Cap base	PGJX50 [PGJX50]	Chromaticity coordinate Y (nom.)	327
Burning Position	UNIVERSAL [Any/Universal]	Colour Temperature, horizontal (Nom)	6000 K
Main application	Entertainment	Lamp Luminous Efficacy EM (Nom)	80 lm/W
Life to 50% failures (nom.)	750 h	Colour Rendering Index,horiz (Nom)	80
System description	FastFit		
Light Technical		Power (Rated) (Nom)	1200 W
Colour Code	- [Not Specified]	Lamp current (nom.)	15 A
Lamp Luminous Flux 25°C EL (Min)	79500 lm	Ignition supply voltage (min.)	198 V
Lamp Luminous Flux 25°C EL (Nom)	95000 lm		
Chromaticity coordinate X (nom.)	318		

MSR Gold™ FastFit

Controls and Dimming

Dimmable	Yes
----------	-----

Mechanical and Housing

Cap-base information	PGJX50
----------------------	--------

Luminaire Design Requirements


Bulb temperature (max.)	950 °C
Pinch temperature (max.)	500 °C

Product Data

Full product code	871829122129600
-------------------	-----------------

Order product name	MSR Gold™ 1200 FastFit 1CT/4
EAN/UPC – product	8718291221296
Order code	928175005115
Local order code	MSRG1200FF
SAP numerator – quantity per pack	1
Numerator – packs per outer box	4
SAP material	928175005115
SAP net weight (piece)	0.147 kg

Dimensional drawing

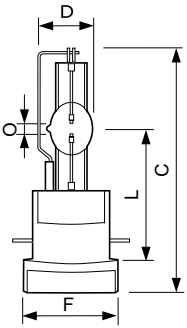

MSR Gold™ 1200 FastFit 1CT/4

Product	D (max)	O	L (min)	L (max)	L	C (max)	F
MSR Gold™ 1200 FastFit 1CT/4	26.1 mm	5.5 mm	64 mm	66 mm	65 mm	128 mm	50 mm

